

Operation instructions

USER'S MANUAL



Professional wireless intercom

PROFESSIONAL FM TRANSCEIVER

Thank you for choosing our products
please find and read this manual before using.

You will receive

Radio*1

Antenna 2pcs(1 long, 1 short), 1 battery, 1 clip, 1 charger, 1 manual

.Charging

Put battery to the desktop charger and put the plug into the AC Power

then you will see the led light is red which means battery is in charging now. It will take 3-

4 hours to charge full and the led will turn green.

And then you can take off the battery and the plug.

Caution:

As usual, the led of the charger is red when the battery is charging. However,

it will twinkle while the battery is broken or charging in a hot environment. Please don't take the radio with the antenna or knob.

Please clean the dust/spot with a non-fuzzing towel

which would avoid poor connect.

Please cover the interface while you don't use the radio.

Please clean the dirty buttons and knob with neutral detergent or wet cloth after long term use,

but no strong corrosive chemical reagent.

The batteries do not be full charged when they leave factory.

Please charge or take a new one after long time without use.

The battery will reach a best level after 2 or 3 times' fully use.

You will need to charge or change the battery when it sustains poor capacity.

Please don't put battery into fire & disassemble the battery pack.

The radio/battery should charge in temperature 0-40°C, otherwise,

it might affect the normal use of battery. Don't

pull off the power and the battery which may interfere the charging procedure. The life of the battery

will be cut down or damaged even though you have followed the correct step of battery use.

Warning

All battery will give risk to your body or damage of your key, decoration,

jewelry when they connect to the terminals of battery.

Because the conductive metal may cause short circuit, which may produce great quantity of heat.

Be careful when you handle any battery, particularly putting them into the clothes, bag, or metal container.

I Quick reference



1. Assembled antenna for analog
2. Assembled antenna for network
3. Power/Volume
4. PTT for Network
5. PTT for Analog
- 6 & 7 & 11 customized buttons by program
8. Universal connector of accessories
9. Menu/confirm
10. Back/hangup, long time press to lock/unlock
- the keyboard
12. Up/Down
13. Long press to collect frequency
14. Keyboard, “*” to switch POC & Analog, “#” change the frequency mode of VFO or CHL

II Operating reference

1 Put the sim card according to the shape in the slot and pack on the battery, you will hear a sound “kada” which mean you have assemble it well.

2. Please turn the knob to the left and you will hear “da” then you will see the led twinkle, into the Homepage.

Press menu button to enter menu, work mode

POC、Analog、MIX、REPEATER **Group**

Member

Channel setting

- bandwidth、output power、RXSQT、TXSQT、Offset setting、Channel name (in VFO mode)、jumping frequency、study code,

Analog setting

- squelch level、TOT、 Powersave、 BCLO、 Stepsize、 Auto Frequency Detect、 channel Clone RX、 Channel Clone TX

POC Setting

- profile、 mic mode、 powersave Conf.、 Sim select、 Autosim switch、 beep, time zone

Phone book Call log Settings

- voice prompt、 backlight、 BEEP、 earphone recognition、 factory reset、 RX priority、 repeat volume

GPS location (optional)

Radio info

- Account info、 Software version、 Module version、 IMEI、 ICCID、 POC version、 upgrade、 analog version

III Simple trouble removed

Please read below information to get rid of some simple questions. And please contact the seller if the problem can't be removed.

1. Bad signal: it may be caused by your poor location (basement or confined space)

which may make the radio cannot reach or make by busy network. Settle: move to a better site which can well receive signal, avoid to use the radio in busy time or wait a moment.

2. Echo & noise

It may be caused by poor connection of part network operators' repeater. Settle: reboot the radio, search base station and switch to a good quality network automatically.

3. No network

The SIM card is out of traffic, or bad signal or not in the service area. Settle: change a new SIM card, move on to an open place and have a try. And please move to the windows to have a try if you are in buildings.